


Gents Digital Roulette

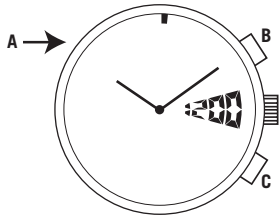

Normal Time Display

1. Normal time display shows hour, minute, seconds.
2. Press B to change display mode (5 modes).
3. Press C for EL.

Digital Time Setting

1. From normal time display, press and hold A to enter setting mode. Hour will begin flashing.
2. Press B to advance hour. Press and hold B for fast advance.
3. Press A to set. Minutes will begin flashing.
4. Press B to advance minutes and reset seconds. Press and hold B for fast advance.
5. Press A to exit setting mode.

NOTE: Setting will automatically return to normal time display if no pusher is operated for 30 seconds.