


## Basic Gents Fuel Digital

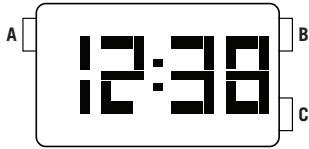

### Normal Time Display

1. Press A for EL.
2. Press B to change display mode. Display mode sequence is time, calendar, seconds.
3. Press C to toggle 12/24H format.

### Time/Calendar Setting

1. From any display mode, press and hold C to enter setting mode; year will begin flashing.
2. Press B to advance setting value. Press and hold B for fast advance.
3. Press C to set and advance to next setting value.
4. Setting sequence is: year, month, date, hour, minute.
5. Setting will automatically return to display mode after minute is set, or if no pusher is operated for 30 seconds.  
*NOTE: When setting hour, digits are in 24 hour display.*