


Dot Matrix Digital

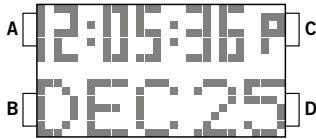

Normal Time Display

1. Press pusher D to change time display modes. (There are 11 different display styles.)
2. In any mode or setting, if no pusher is operated for 30 seconds, setting will be returned to selected time display mode.

Time Setting Mode

1. From any time display mode, press and hold pusher C for 2 seconds to enter time setting mode; hour will begin flashing.
2. Press pusher D to adjust value. Press and hold pusher D for fast advance.
3. Press pusher C to set and advance to the next setting value.
4. Continue for minute, second, year, month, and date. Automatically exits time setting mode once date is set and returns to selected time display mode.
5. Day of week will automatically adjust upon exiting time setting mode.

Message Setting Mode

1. From time display mode with either message or message and icon, press and hold pusher B for 2 seconds to enter message setting mode; first character will begin flashing.
2. Press pusher D to select character. Press and hold pusher D for fast advance.
3. Press pusher C to set and advance to the next character (up to 50 characters, including spaces).
4. Press pusher A to delete a character before the cursor. Press pusher A to delete entire message.
5. Press pusher B to insert a character before the cursor.
6. Press and hold pusher B to set message and exit message setting mode.

NOTE: Character selection is A-Z, 0-9, and : ' ! ? @ , .

Icon Setting Mode

From time display mode with message and icon, press pusher C to select and change icon.