


Digital MLG-017

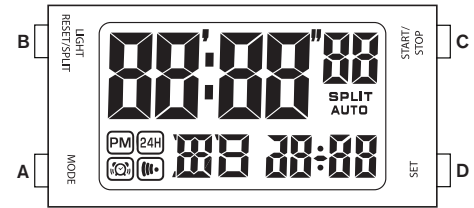

Normal Time Display

1. Press A to change mode. Mode sequence is normal time, alarm, time zone 2, timer, and chronograph.
2. Press B for EL.

NOTE: At any point in any setting mode, press D to exit setting mode.

NOTE: In any setting mode, if no pusher is operated for 2 minutes, all changes will be saved and the setting will automatically return to display mode.

Time and Calendar Setting

1. In normal time display, press D; seconds will begin flashing.
2. Press C to set seconds to zero.
3. Press A to advance to hour.
4. Press C to advance digit, press and hold C for fast advance.
5. Press A to set and advance to next setting value.
6. Setting sequence is: seconds, hour, minute, year, month, and date.
7. Press D to exit setting mode.

NOTE: Weekday is automatically updated upon exiting setting mode.

NOTE: At any point in time/calendar setting mode, press B to toggle 12/24 hour format.

Alarm Mode

1. Press A to change to alarm mode.
2. Press B to toggle alarm/chime on/off.

Alarm Setting

1. Press A to change to alarm mode.
2. Press D to enter setting mode; hour will begin flashing.
3. Press C to advance digit; press and hold C for fast advance.
4. Press A to set and advance to next setting value.
5. Setting sequence is: hour, minutes, month, date. For daily alarm, leave month and date set at "----".
6. Press D to exit setting mode.

Time Zone 2

1. Press A to change to time zone 2.
NOTE: In time zone 2 display, normal time is shown in the lower portion of the display.
2. Press D to enter setting mode; hour will begin flashing.
3. Press C to advance digit, press and hold C for fast advance.
4. Press A to set and advance to minutes.
5. Press C to advance digit, press and hold C for fast advance.
6. Press D to exit setting mode.
NOTE: At any point in time zone 2 setting mode, press B to toggle 12/24 hour format.

Countdown Timer

1. Press A to change to timer mode.
2. Press C to start/stop the timer.
3. Press B to clear the countdown and reset the timer.

Timer Setting

1. Press D to enter setting mode; hour will begin flashing.
2. Press C to advance digit; press and hold C for fast advance.
3. Press A to set and advance to next setting value.
4. Setting sequence is: hour, minutes, seconds.
5. Press D to exit setting mode.
NOTE: At any point in setting mode, press B to toggle auto reset on/off. When auto reset is on, timer will automatically re-start upon reaching zero.

Chronograph Mode

1. Press A to change to chronograph mode.
2. Press C to start/stop the chronograph.
3. Press B to reset to zero.

Split Time

1. Press B while the chronograph is running for split time.
2. Press B again to return to chronograph.
3. Press C to finalize timing.
4. Press B to reset to zero.