


Ana-Digi

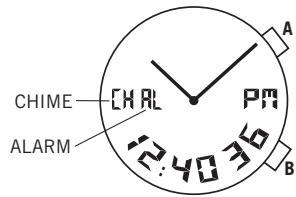

Normal Time Display

1. In regular time display mode, press pusher A to toggle between 12/24-hour format.
2. Press pusher B to view date mode.

Time and Calendar Setting

1. Press and hold pusher A for 2 seconds to enter setting mode. Year will begin flashing.
2. Press pusher A to select year, month, date, hour, minute, second, and then exit setting mode.
3. Press pusher B to adjust digit.
4. Press and hold pusher B to adjust digit automatically.
5. If no pushers are operated for 30 seconds, setting will be returned to Normal Time Display.

Chronograph

1. Press pusher B to select chronograph mode.
2. Press pusher A to start/stop the chronograph.
3. Press and hold pusher B for one second to reset.

Alarm Setting

1. Press pusher B to enter alarm mode.
2. Press pusher A for chime/alarm on/off.
3. Press and hold pusher A for 2 seconds to enter setting mode. Hour will begin flashing.
4. Press pusher A to select hour and minute.
5. Press pusher B to adjust digit.
6. Press and hold pusher B to adjust digit automatically.
7. Any change in the alarm time will enable the alarm automatically.
8. If no pushers are operated for 30 seconds, setting will be returned to Normal Time Display.

Off Mode

Press pusher B four times to display off mode from time mode.