


Fuel Digital

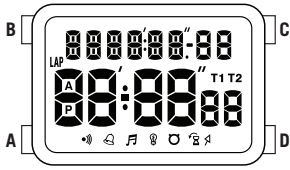

Normal Time Display / EL Function

1. Press pusher A to change mode.
2. Press pusher B for EL. EL stays on for 3 seconds.
3. Press and hold pusher B for 2 seconds to enter time setting mode; light will begin flashing.
4. Press C or D to turn light On or Off.
5. When light function is on, EL will be on if any key is pressed. Light function will automatically turn off after 30 minutes.
6. Press pusher C to toggle between T1/T2 display. Press and hold pusher C for 2 seconds to set T1 or T2 as default time display.
7. Press pusher D to toggle on/off the key tone.
8. In any mode or setting, if no pusher is operated for 30 seconds, setting will be returned to Normal Time Display.

Time Setting Mode

1. From T1 display, press and hold pusher B for 2 seconds to enter time setting mode; light will begin flashing.
2. Press pusher A to toggle to time setting mode.
3. Press C or D to adjust chime on/off, 12/24 hour, hour, minute, second, year, month/date or date/month format.
4. While in month/day mode, press pusher A to select either "month or day"; then press C or D to advance the month/day.
5. Press pusher B to exit setting mode.
6. From T2 display, press and hold pusher B for 2 seconds to enter T2 setting mode (Offset Mode).
7. Press pusher C/D to adjust time difference between T2 and T1; range of time difference is + or - 23H.
8. Press pusher B to exit setting mode.

Chronograph Mode

1. Press pusher A to select chronograph mode.
2. Press pusher C to start/stop the chronograph. Stopwatch icon will be flashing in all modes while chronograph is running.
3. Press and hold pusher D for 2 seconds to reset the chronograph.

Lap Counting

1. Press pusher D while chronograph is running (will record up to 10 laps). Lap "L" will show if lap number > 9. The last lap memory will be the latest lap, but the first 9 laps will be kept unchanged.
2. Press pusher B to recall laps.
3. Press pusher B to view the next lap.
4. Press pusher C or D to exit Recall Mode and go back to Chronograph Mode.

Timer Setting Mode

1. Press and hold pusher B for 2 seconds to enter timer setting mode. Timer type will begin flashing.
2. Press pusher C/D to adjust type of timer: CD STP (countdown, stop), CD REP (countdown, repeat), or CD UP (countup timer).
3. Press pusher A to set and advance to the next setting value.
4. Continue for hour, minute, second.
5. Press pusher B to exit setting mode.

Countdown/Countup Timer

1. Press pusher A to select timer mode.
2. Press pusher C to start/stop the timer.
3. Hourglass icon will flash if counter is counting down. Timer alarm will beep for 30 seconds in normal countdown mode.
4. Hourglass icon with upwards arrow will flash if counter is counting up.
5. Hourglass icon with arrow around upper part of hourglass will flash if counter is counting down, and will automatically repeat. Timer alarm will beep for 1 second only each time the timer counts down to zero.
6. Press pusher D to reset the counter to the preset value when the timer is stopped.

Alarm Mode (4 alarms)

1. Press pusher A to select alarm mode.
2. Press pusher C to select the alarm.
3. Press pusher D to toggle alarm on/off.

Alarm Setting Mode

1. Press and hold pusher B for 2 seconds to enter alarm setting mode. Hour will begin flashing.
2. Press pusher C/D to adjust value.
3. Press pusher A to set and advance to minute setting.
4. Press pusher B to exit setting.
5. Alarm will be enabled automatically if there is any change in hour or minute.