


Fuel Sport Digital

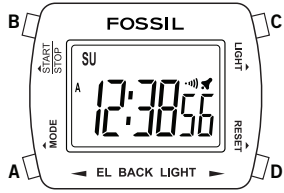

Normal Time Display

1. Press pusher A to change mode.
2. Press pusher B to show month/date.
3. Press pusher C for EL.
4. Press pusher D to show alarm set time.
5. Press and hold pusher D and press pusher B to toggle alarm on/off.
6. Press and hold pusher D and press pusher A to toggle hourly chime on/off.

NOTE: Days of week will toggle on when chime is set to on.

Time and Calendar Setting Mode

1. Press pusher A three times to enter time setting mode.
2. Press pusher B to advance seconds to zero.
3. Press pusher D to select and change minutes, hour, date, month and day.
4. Press pusher B to adjust digits. Press and hold pusher B for fast advance.
5. Press pusher A to exit setting mode.

NOTE: 12/24 hour format can be selected when setting the hour.

Chronograph Stopwatch

1. Press pusher A once to enter chronograph mode. "SU", "FR" and "SA" will flash.
2. Press pusher B to start/stop the chronograph.
3. Press pusher D while chronograph is running for split time.
4. Press pusher D again to return to the chronograph.
5. Press pusher D to finalize timing.
6. Press pusher D to reset to zero.

Alarm Setting Mode

1. Press pusher A twice to enter alarm setting mode. "MO" will flash.
2. Press pusher D to toggle between hour and minute.
3. Press pusher B to advance digits; press and hold pusher B for fast advance.
4. Press pusher A to exit setting mode.
5. Alarm will sound for 1 minute if on.
6. Press pusher B for snooze for 5 minutes.
7. Press pusher C to turn off alarm sound.