


Ladies Slim Digital

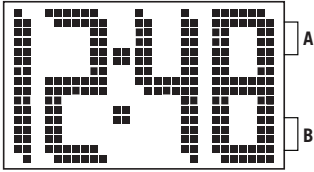

Normal Time Display

1. Press A to display calendar for 3 seconds.
2. Press A twice to display seconds. Press A again to return to normal time display.

Time and Calendar Setting

1. Press B twice to display month.
2. Press A to advance month.
3. Press B to set and advance to next setting value.
4. Setting sequence is month, date, am/pm hour, and minutes.
5. Press B to set. Press A to exit setting mode. Seconds will automatically reset to zero when minutes are changed.
6. The watch is activated when the colon (:) is flashing.